



## Manual digital key system iLOQ

The central entrance doors in the building are equipped with a digital key system.

### The use of the key

- Insert the key into the lock. The blue circle of the key should be on the left side with the beard of the key – the jagged part – facing down.
- Turn the key.
- Does the lock not open? Then take out the key and try again but slower. This gives the lock time to recognize the key.

The ignition wire on the metal part of the key should be clean and smooth. If the contact wire is dirty, wipe it clean with a soft cloth. Replace the key if the ignition wire is damaged.

### The use of the digital wall reader

Does the central entrance door of the building have a wall reader (as shown in the image below) to open the door?

Use it as follows:

- Hold the key against the circle at the bottom of the wall reader (see red arrows).
- After offering the key, the lock unlocks and the door can be opened or the door opens automatically.

Is the key not working? Then hold the key against the circle on the wall reader until you hear a sound and/or the light turns green.

